



ROFU 10320HD Heavy Duty Door Cord Installation Instructions




Installation Steps

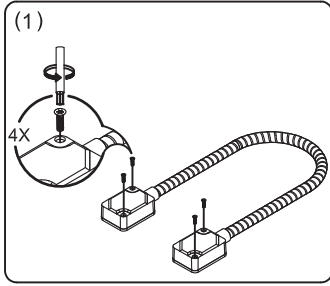


Turn the head cover screws counterclockwise to loosen them.

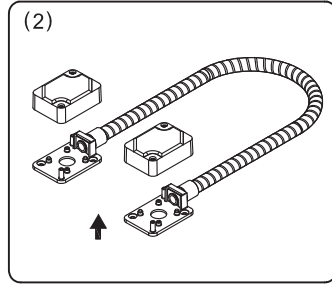


Remove the head covers.

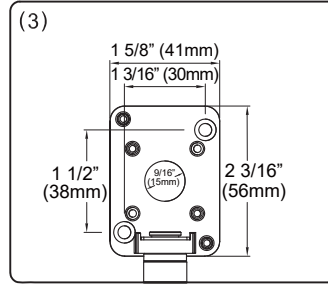


Align the two ends with the intended positions, and mark on the door and frame.

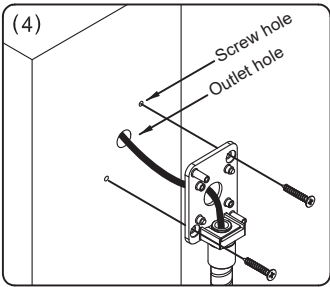


Drill holes in the marked positions, and secure the two ends by using 4x25 screws.
Screw hole diameter: 1/8" (3.3mm)
Outlet hole diameter: 1/2" (12mm)

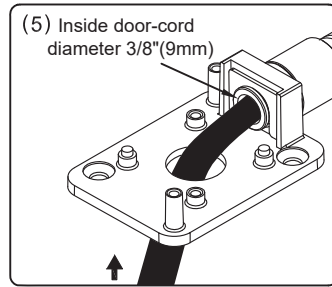

Connect the wire to each end of the cord and test the unit.

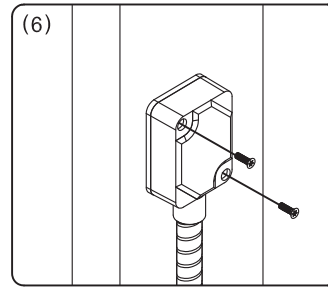

Mount the head covers and tighten the screws.

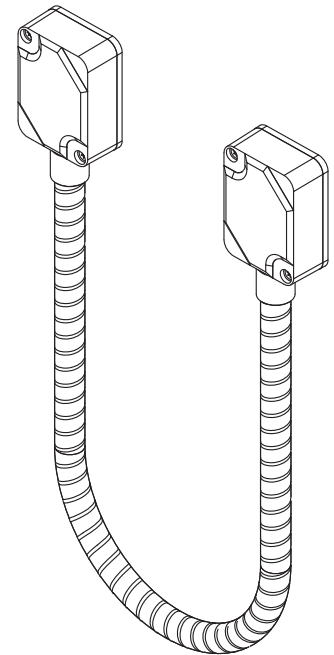


Voltage rating 2A/12VDC


ROFU 10320HD Heavy Duty Door Cord Installation Instructions




Installation Steps

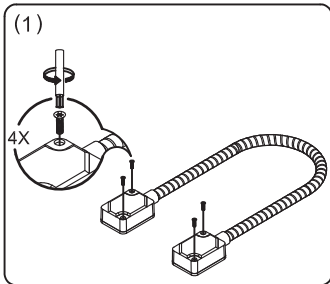


Turn the head cover screws counterclockwise to loosen them.

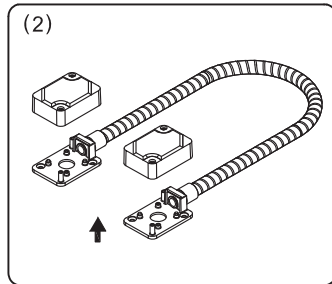


Remove the head covers.

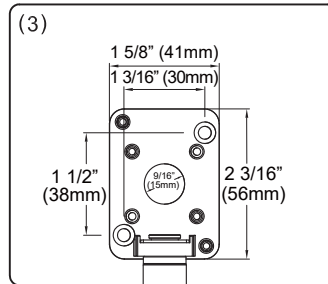


Align the two ends with the intended positions, and mark on the door and frame.

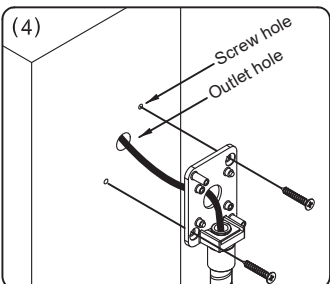


Drill holes in the marked positions, and secure the two ends by using 4x25 screws.
Screw hole diameter: 1/8" (3.3mm)
Outlet hole diameter: 1/2" (12mm)

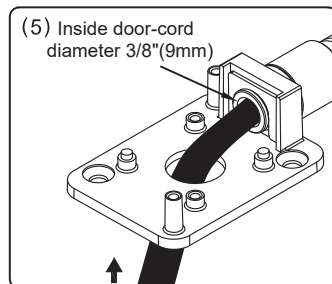

Connect the wire to each end of the cord and test the unit.

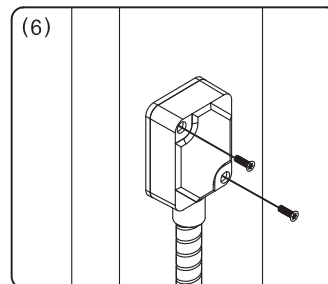

Mount the head covers and tighten the screws.

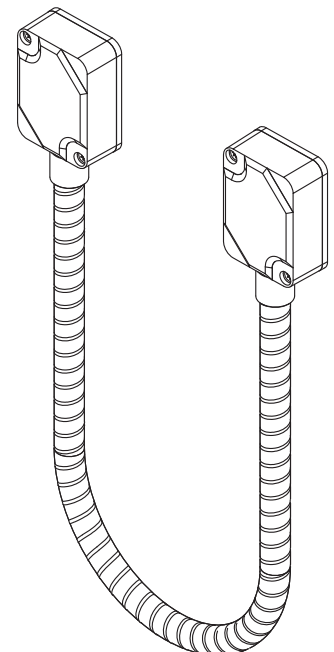

Voltage rating 2A/12VDC