




ROFU Electric Strike 1401, 1701, 3401 Wood Jamb

Installation Instructions

1. Prepare door jamb per drawing.
2. Connect wires coming from the low voltage side of the transformer to terminal block of door strikes.
3. Install electric door strike to jamb attaching with #8 wood screws.
4. Attach faceplate using M 4X10 screws.

Note:

For mortise lockset with auxiliary deadlatch:
To secure that the latchbolt falls properly into the keeper, the centerline of the auxiliary deadlatch must be 1-1/8" above (or below when application) the centerline of the strike. Before installation make sure that the FA/FIX part is moved to the outside of the lip bracket.

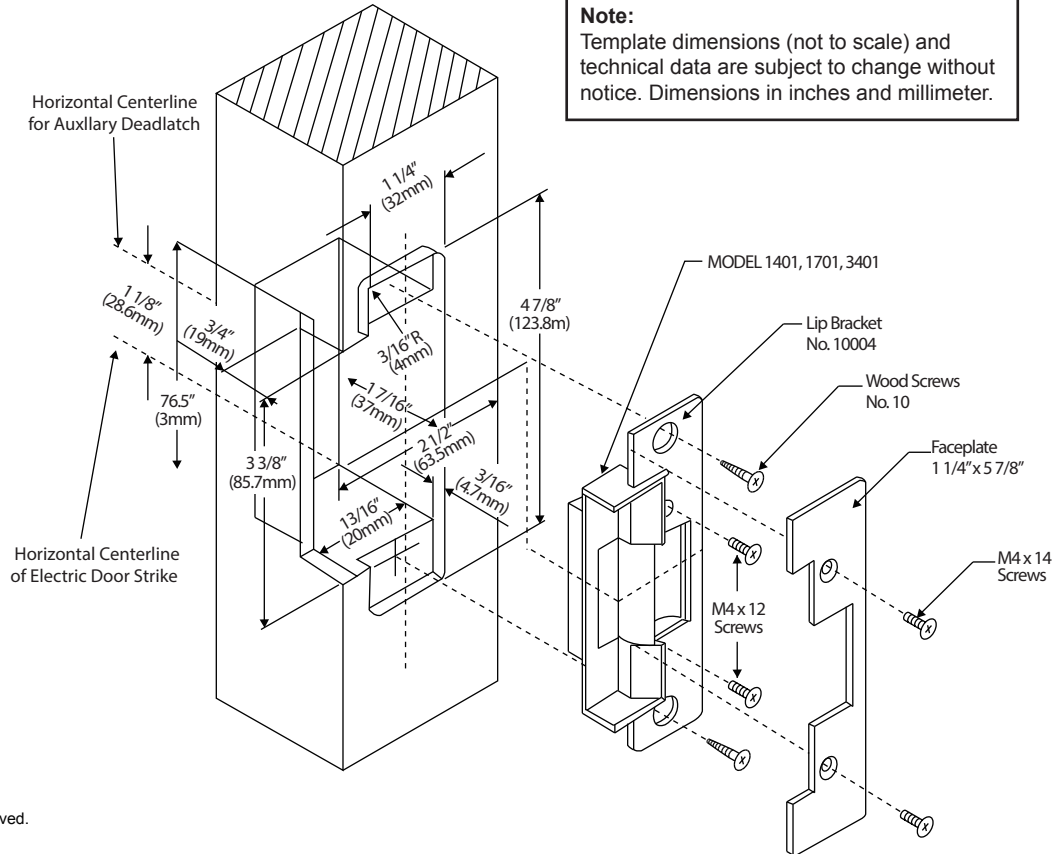

Note:
Template dimensions (not to scale) and technical data are subject to change without notice. Dimensions in inches and millimeter.

ROFU Security International Corp.
10029 S. Tacoma Way, E-11
Lakewood, WA 98499
253-922-1828
www.ROFU.com
OrderEntry@ROFU.com